

ABSOLUTE BRAKE® – AIR BRAKE PLUNGER SECURING DEVICE LEGAL DISCLOSURE & INSTALLATION INSTRUCTIONS

AB600L



Figure # 1

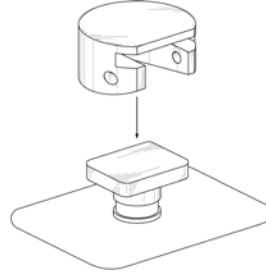


Figure # 2



Figure # 3



Figure # 4

**INSTALLATION INSTRUCTIONS
FOR COMMERCIAL BENDIX
CONTROLLER VALVE**

AB600L - Specifically Designed for International ProStar Tractors with or without Sleepers

Bendix Part#

**PP-DC
MV-3**

Prior to placing the Absolute Brake® AB600L into position, the Absolute Brake® Cap of the device should be facing the person applying the AB600L (see Figure # 1). Lightly swivel the AB600L back and forth in a downward motion between the base of the Dash and the Plunger Knob/Cap, until it locks securely into place (See Figure # 2). The angled trim piece on the dash surrounds the Push/Pull Controller Valve and the AB600L is designed to follow the contour of the dash. Once in position, the AB600L should be a **snug fit** and the operator should not be able to engage the parking brake – you may need to adjust the Plunger Knob by either turning it clockwise or counter-clockwise (see Figure # 3). There are flared entry holes on both sides of AB600L that are for the Master Lock® to easily slide all the way through the device and, once completely through the holes, it can be easily locked (see Figure # 4). To remove the AB600L Air Brake Plunger Securing Device, simply swivel the device back and forth while pulling the device in an upward motion from the control valve. We hope you enjoy the Safety, Security & Peace of Mind this product provides you!